

Troubleshooting FMT6910

- Check that the timer is switching on, if it isn't take the back cover off and check that no connections have worked loose. If they have reconnect them. If all connected and still not working the timer has a terminal fault and needs replacing.
- If the timer is working the next unit to check is the switch attached to the heater cassette. If the red light comes on when the timer is switched on this is o.k. If not first check is the fuse (this is found by unscrewing the black plastic fuse holder), secondly check for loose wires by taking the back cover off the unit.