
ani tronic



anisprayguns.it

ANI Tronic PARTS & SPARES

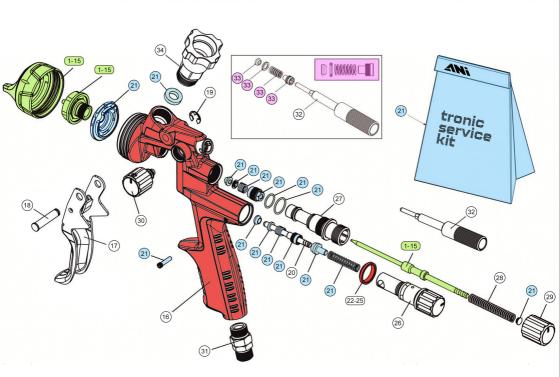















SPARES TABLE

INEXP - MAIN TOWARD NOZES, Needle, ANDE SRUD BHISTORIA 1 AMM THAP NOZES, Needle, ANDE SRUD BHISTORIA 3 LAMM THAP NOZES, Needle, ANDE SRUD BHISTORIA 4 AMM THAP NOZES, Needle, ANDE SRUD BHISTORIA 4 SMAN THAP PRAZES, Needle, ANDE SRUD BHISTORIA 6 JOMAN THAP NOZES, Needle, ANDE SRUD BHISTORIA CEAR - AN TITUSHIN NEEDLE, Needle, ANDE SRUD BHISTORIA 7 AMM TO EAR NOZES, Needle, ANDE SRUD BHISTORIA 8 BHISTORIA BHISTORIA 9 AMM TO EAR NOZES, Needle, ANDE SRUD BHISTORIA 10 BLIMIT CEEAR NOZES, Needle, ANDE SRUD BHISTORIA 11 JAMIN TO EAR NOZES, Needle, ANDE SRUD BHISTORIA 12 JAMIN THE NOZES, Needle, ANDE SRUD BHISTORIA 13 JAMIN THE NOZES, Needle, ANDE SRUD BHISTORIA 14 JAMIN THE NOZES, Needle, ANDE SRUD BHISTORIA 15 JAMIN THE NOZES, Needle, ANDE SRUD BHISTORIA 16 JAMIN THE NOZES, Needle, ANDE SRUD BHISTORIA 16 JAMIN THE NOZES, NEEDLE, ANDE SRUD	No.	Part Description	Part No.	
2 1.4MM 14VP** Piczia, Neede, Aricap Selap BH1537541A 3 1.5MM 14VP** Piczia, Neede, Aricap Selap BH153754A 4 1.7MM 14VP.* Piczia, Neede, Aricap Selap BH153754A 5 1.5MM 14VP.* Piczia, Neede, Aricap Selap BH153754A CEAR** AND TSCAR** Nozza, Neede and Aricap Selap BH153754A 6 1.2MM *CLEAR** Nozza, Neede, Aricap Selap BH153754A 8 1.2MM *CLEAR** Nozza, Neede, Aricap Selap BH153754A 8 1.2MM *CLEAR** Nozza, Neede, Aricap Selap BH153754A 8 1.2MM *CLEAR** Nozza, Neede, Aricap Selap BH153754A 10 1.5MM *PS** Nozza, Neede, Aricap Selap BH153754A 11 1.7MM *PS** Nozza, Neede, Aricap Selap BH153754A 12 1.5MM *PS** Nozza, Neede, Aricap Selap BH153754A 12 1.5MM *PS** Nozza, Neede, Aricap Selap BH153754A 14 1.3MM *PS** Nozza, Neede, Aricap Selap BH153755A 14 1.3MM *PS** Nozza, Neede, Aricap Selap BH153755A 15 1.4MM *HS** Nozza, Neede, Aricap Selap BH153755A 16 1.5MM *HS** Nozza, Neede, Aricap Selap	HVLP - ANI TRONIC Nozzle, Needle and Aircap Setup			
1	1	1.3MM *HVLP* Nozzle, Needle, Aircap Setup	BH1537539A	
4 17.00M 1902P* Nezzie, Neede Arrasp Setup 19.00M 1902P* Nezzie, Neede Arrasp Setup 19.00M 1902P* Nezzie, Neede Arrasp Setup CLEAR-AM TUSEZIE, Neede and Arrasp Setup 19.00M 1902P* Nezzie, Neede and Arrasp Setup 19.1153754AA 7 12.00M 1902P* Nezzie, Neede, Arrasp Setup 81153754AA 8 13.00M 1902P* Nezzie, Neede, Arrasp Setup 91153754AA 8 13.00M 1902P* Nezzie, Neede, Arrasp Setup 91153754AA 1879 ** AN TONZEEN* Neede, Arrasp Setup 91153754AA 1870 ** AN TONZEEN* Neede, Arrasp Setup 91153754AA 1970 ** 1,500M 1967* Nezzie, Neede, Arrasp Setup 91153754AA 11 ** 1,700M 1967* Nezzie, Neede, Arrasp Setup 91153754AA 11 ** 2,700M 1967* Nezzie, Neede, Arrasp Setup 91153754AA 11 ** 1,700M 1967* Nezzie, Neede, Arrasp Setup 911537554A 12 ** 1,700M 1967* Nezzie, Neede, Arrasp Setup 911537554A 14 ** 1,700M 1968* Nezzie, Neede, Arrasp Setup 911537554A 14 ** 1,700M 1968* Nezzie, Neede, Arrasp Setup 911537554A 14 ** 1,700M 1968* Nezzie, Neede, Arrasp Setup 911537554A 14 ** 1,700M 1968* Nezzie, Neede, Arrasp Setup 911537554A 14 ** 1,700M 1968* Nezzie, Neede, Arrasp Setup	2	1.4MM *HVLP* Nozzle, Needle, Aircap Setup	BH1537540A	
6 19 MM HVLP* Nazzie, Neede, Arrap Setup BH153754AA CLEAR-AN TUTCH Nazzie, Neede, Arrap Setup BH153754AA 1 19 MM * CLEAR* Nazzie, Neede, Arrap Setup BH153754AA 8 13 MM * CLEAR* Nazzie, Neede, Arrap Setup BH153754AA 9 14 MM * CLEAR* Nazzie, Neede, Arrap Setup BH153754AA 11 15 MM * HSS* Nazzie, Neede, Arrap Setup BH153754AA 11 17 MM * HSS* Nazzie, Neede, Arrap Setup BH153754AA 12 18 MM * HSS* Nazzie, Neede, Arrap Setup BH153754AA 12 18 MM * HSS* Nazzie, Neede, Arrap Setup BH153755AA 14 1 2 MM * SSE* Nazzie, Neede, Arrap Setup BH153755AA 14 1 3 MM * ASSE* Nazzie, Neede, Arrap Setup BH153755AA 16 3 MM * ASSE* Nazzie, Neede, Arrap Setup BH153755AA 16 4 MM * SSE* Nazzie, Neede, Arrap Setup BH153755AA 17 7 Togger BH153755AA BH15375AA 18 1 Togger Security Asset Setup BH153755AA 19 1 Togger Security Asset Setup BH15375AA 2 1 Togger Security Asset Setup BH153755AA </td <td>3</td> <td>1.5MM *HVLP* Nozzle, Needle, Aircap Setup</td> <td>BH1537541A</td>	3	1.5MM *HVLP* Nozzle, Needle, Aircap Setup	BH1537541A	
CLEAR - AN INCIDENCE Necesia, Needle, Arraip Sellip 6 1 0.MM * CLEAR** Neezia, Needle, Arraip Sellip BH1537544A 7 1 2.MM * CLEAR** Neezia, Needle, Arraip Sellip BH1537546A 8 1 3.MM * CLEAR** Neezia, Needle, Arraip Sellip BH1537560A 16°* 1 4.MM * CLEAR** Neezia, Needle, Arraip Sellip BH1537560A 16°* 1 5.MM * FS** Neezia, Needle, Arraip Sellip BH1537560A 11° 1 7.MM * FS** Neezia, Needle, Arraip Sellip BH1537560A 12° 1 9.MM * FS** Neezia, Needle, Arraip Sellip BH1537560A 12° 1 9.MM * FS** Neezia, Needle, Arraip Sellip BH1537560A 12° 1 9.MM * FS** Neezia, Needle, Arraip Sellip BH1537560A 14° 1 3.MM * PS** Neezia, Needle, Arraip Sellip BH1537560A 14° 1 3.MM * PS** Neezia, Needle, Arraip Sellip BH1537560A 14° 1 3.MM * PS** Neezia, Needle, Arraip Sellip BH1537560A 15° 1 7.MM * PS** Neezia, Needle, Arraip Sellip BH1537560A 16° 1 7.MM * PS** Neezia, Needle, Arraip Sellip BH1537560A 16° 1 7.MM * PS** Neezia, Needle, Arraip Sellip BH1537560A	4	1.7MM *HVLP* Nozzle, Needle, Aircap Setup	BH1537542A	
6 1.0MM **CLEAR*** Nozzia, Neede, Aircap Selup BH1537544A 7 4.10MM **CLEAR*** Nozzia, Neede, Aircap Selup BH1537546A 8 1.3MM **CLEAR*** Nozzia, Neede, Aircap Selup BH1537546A 18 1.3MM **CLEAR*** Nozzia, Neede, Aircap Selup BH153754A 18 1.3MM **CLEAR*** Nozzia, Neede, Aircap Selup BH153754A 19 1.5MM **PS** Nozzia, Neede, Aircap Selup BH153754A 11 1.7MM **PS** Nozzia, Neede, Aircap Selup BH153754A 11 1.7MM **PS** Nozzia, Neede, Aircap Selup BH153754A 12 1.3MM **PS** Nozzia, Neede, Aircap Selup BH153754A 14 1.3MM **PS** Nozzia, Neede, Aircap Selup BH153754A 15 <	5	1.9MM *HVLP* Nozzle, Needle, Aircap Setup	BH1537543A	
7 1 2MM *CLEAR* Nozzie, Neede, Aircap Setup BH153754BA 8 1 3MM *CLEAR* Nozzie, Neede, Aircap Setup BH153754BA 9 1 AMM *CLEAR* Nozzie, Neede, Aircap Setup BH153754BA H78 - ANN TEXZIE, Neede and Aircap Setup BH153754BA 11 1 7MM *HPS* Nozzie, Neede, Aircap Setup BH153754BA 12 1 3MM *HPS* Nozzie, Neede, Aircap Setup BH153754BA 13 1 2MM *HPS* Nozzie, Neede, Aircap Setup BH153754BA 14 1 2MM *BSE* Nozzie, Neede, Aircap Setup BH1537554B 13 1 2MM *BSE* Nozzie, Neede, Aircap Setup BH1537554B 14 1 1 3MM *BSE* Nozzie, Neede, Aircap Setup BH1537554B 15 1 1 3MM *BSE* Nozzie, Neede, Aircap Setup BH1537554B 16 1 1 3MM *BSE* Nozzie, Neede, Aircap Setup BH1537554B 17 1 1 6gger BH1537554B BH1537554B 18 1 7 1 6gger BH1537554B BH1537554B 2 1 7 1 6gger BH1537554B BH1537554B 3 1 7 1 6gger BH1537554B BH1537554B 2 1 1 6 1 6 6 6 6 7 6 7 6 6 7 6 7 6 7 6 7	CLEAR - ANI TRONIC Nozzle, Needle and Aircap Setup			
8 1.3MM *CLEAR** Nozzie, Needle, Arcap Setup BH1537546A 9 1.4MM *CLEAR** Nozzie, Needle, Arcap Setup BH1537546A HIPS-AN ITEX-AN TEXAZIE, Needle, Arcap Setup BH1537546A 10 1.5MM *H95* Nozzie, Needle, Arcap Setup BH1537546A 12 1.7MM *H95* Nozzie, Needle, Arcap Setup BH1537540A 12 1.7MM *H95* Nozzie, Needle, Arcap Setup BH153756A 18 2.7MM *H95* Nozzie, Needle, Arcap Setup BH153756A 14 1.2MM *BASE* Nozzie, Needle, Arcap Setup BH153756A 15 1.2MM *BASE* Nozzie, Needle, Arcap Setup BH153754A 16 1.7MM *BASE* Nozzie, Needle, Arcap Setup BH153754A 16 1.7MM *BASE* Nozzie, Needle, Arcap Setup BH153754A 16 1.7MM *BASE* Nozzie, Needle, Arcap Setup BH153754A 17 1.7MM *BASE* Nozzie, Needle, Arcap Setup BH153754A 18 1.7MM *BASE* Nozzie, Needle, Arcap Setup BH153754A 19 1.7MM *BASE* Nozzie, Needle, Arcap Setup BH153755A 20 1.7MM *BASE* Nozzie, Needle, Arcap Setup BH153755A 21 2.7MM *BASE* Nozzie, Needle, Ar	6	1.0MM *CLEAR* Nozzle, Needle, Aircap Setup	BH1537544A	
9	7	1.2MM *CLEAR* Nozzle, Needle, Aircap Setup	BH1537545A	
HPS-AN ITENDED: Nozzie, Needle and Aircap Setup BH1537548A 10 1.5MM *HPS* Nozzie, Needle, Aircap Setup BH1537548A 11 1.7MM *HPS* Nozzie, Needle, Aircap Setup BH1537549A 12 1.5MM *HPS* Nozzie, Needle, Aircap Setup BH153756A 12 1.7MM *HS* Nozzie, Needle, Aircap Setup BH1537557A 14 1.2MM *BASE* Nozzie, Needle, Aircap Setup BH153756A 15 1.4MM *BASE* Nozzie, Needle, Aircap Setup BH153756A 16 1.5MM *BASE* Nozzie, Needle, Aircap Setup BH163776A 17 1.7Gger Mourit Stud BT148171-TRN 20 1.7Gger Mourit Stud BT148176-TRN 21 1.7Gger Mourit Stud BT148176-TRN 21 1.7Gger Mourit Stud BT148176-TRN	8	1.3MM *CLEAR* Nozzle, Needle, Aircap Setup	BH1537546A	
10 1.5MM *14PS* Nozzie, Needle, Aircap Setup BH153754BA 11 1.7MM *14PS* Nozzie, Needle, Aircap Setup BH153750A 12 1.5MM *14PS* Nozzie, Needle, Aircap Setup BH1537550A BASE: ANITONIC Nozzie, Needle, Aircap Setup BH1537551A 14 1.3MM *1ASE* Nozzie, Needle, Aircap Setup BH1537550A 14 1.3MM *1ASE* Nozzie, Needle, Aircap Setup BH1537550A 15 1.4MM *1BASE* Nozzie, Needle, Aircap Setup BH1537550A 16 3.5MM *1BASE* Nozzie, Needle, Aircap Setup BH1537550A 17 Trögger Mouril Stud BH1537550A 18 1.7MG *1BASE* Nozzie, Needle, Aircap Setup BH1537550A 19 1.7MG *1BASE* Nozzie, Needle, Aircap Setup BH1537550A 10 1.7MG *1BASE* Nozzie, Needle, Aircap Setup BH1637550A 11 1.7MG *1BASE* Nozzie, Needle, Aircap Setup BH1637550A 12 1.7MG *1BASE* Nozzie, Needle, Aircap Setup BH1637550A 12 1.7MG *1BASE* Nozzie, Needle, Aircap Setup BH1637550A 21 1.7MG *1BASE* Nozzie, Needle, Aircap Setup BH1637550A 22 1.7MG *1BASE* Nozzi	9	1.4MM *CLEAR* Nozzle, Needle, Aircap Setup	BH1537565A	
11 1.7MM *HPS* Nozzie, Needle, Aircap Setup BH1537560A 12 1.9MM *HPS* Nozzie, Needle, Aircap Setup BH1537550A BASE - ANTEONIC Nozzie, Needle, Aircap Setup BH1537551A 13 1.2MM *BASE* Nozzie, Needle, Aircap Setup BH1537551A 14 1.3MM *BASE* Nozzie, Needle, Aircap Setup BH1537550A 16 1.3MM *BASE* Nozzie, Needle, Aircap Setup BH1537550A 16 1.4MM *BASE* Nozzie, Needle, Aircap Setup BH1537550A 17 1.9Gper BH1537550A 18 Trigger Mount Stud BH1537532A 19 1.7Gger Mount Stud BH16371-TRN 20 Trigger Mount Stud BH16471-TRN 21 7.0Gger Mount Stud BH16471-TRN 21 7.0Gger Seme BH16471-TRN 21 7.0Gger Mount Stud BH16471-TRN 22 7.0Gger Seme BH16471-TRN 23 *Vin WUNTER-RASED* Seveder Valve O-Ring BE14821-TRN 24 *HP2* Spreader Valve O-Ring BE14821-TRN 25 *Air Valve Sene Setup BH1657550A 27	HPS - ANI TRONIC Nozzle, Needle and Aircap Setup			
12 1,9MM***********************************	10	1.5MM *HPS* Nozzie, Needle, Aircap Setup	BH1537548A	
BASE - ANI TRONITO Nozzie, Needie and Aircap Setup 13 1 2MM* BASE* Nozzie, Needie, Aircap Setup BH1537551A 14 1 3MM* BASE* Nozzie, Needie, Aircap Setup BH1537552A 15 1 3MM* BASE* Nozzie, Needie, Aircap Setup BH1537564A 16 5 pray Gun Body BH1537552A 17 Trigger BH1537552A 18 7 frigger Mount Stud BH1637552A 19 7 frigger Mount E Clip BT48171-TRN 20 7 frigger Mount E Clip BT48171-TRN 21 5 pray Gun Service / Repair Kit BH0847211-TRN 21 5 pray Gun Service / Repair Kit BH0847211-TRN 22 ****CLEAR* Spreader Valve O-Ring BE148219-TRN 23 ****TWB (WATER-BASED)* Spreader Valve O-Ring BE148220-TRN 24 ****THYP* Spreader Valve O-Ring BE148220-TRN 25 ***Alv Valve O-Ring BE148220-TRN 26 **Air Valve Stem BT148170-TRN 27 **Air Valve Stem BT148170-TRN 28 **Piud Agjusting Kriob BU1537561A 31	11	1.7MM *HPS* Nozzle, Needle, Aircap Setup	BH1537549A	
13 1.2MM*BASE* Nozzie, Neede, Arcap Setup BH1537551A 14 1.3MM*BASE* Nozzie, Neede, Arcap Setup BH1537552A 15 1.4MM*BASE* Nozzie, Neede, Arcap Setup BH1537564A 16 Spray Cun Body BH1537552A 17 Tripger BH1537552A 18 Tripger Mount Stud BH1637552A 18 Tripger Mount E Clip BT14817-TRN 20 Tripger Stem B114817-TRN 21 Spray Gun Service / Repair Kit BH0847211-TRN 21 Spray Gun Service / Repair Kit BH0847211-TRN 22 ************************************	12	1.9MM *HPS* Nozzie, Needle, Aircap Setup	BH1537550A	
14 1.3MM *BASE* Nozde, Needle, Aircap Setup BH1537552A 15 1.4MM *BASE* Nozde, Needle, Aircap Setup BH1537564A 16 Spray Gun Body BH153755A 17 Trigger BH1537532A 18 Trigger Mount Stud BT148171-TRN 19 Trigger Mount Stud BT148174-TRN 20 Trigger Stem BT148174-TRN 21 Spray Gun Service / Repair Kit BH0884721-TRN 21 Spray Gun Service / Repair Kit BH0884721-TRN 21 Spray Gun Service / Repair Kit BE148219-TRN 22 "CLEAR* Spreader Valve O-Ring BE148219-TRN 23 "HVLP* Spreader Valve O-Ring BE148219-TRN 24 "HPS* Spreader Valve O-Ring BE148219-TRN 25 Price Agent Valve O-Ring BE148219-TRN 26 Spraeder Valve O-Ring BE148219-TRN 27 Air Valve Stem BH1537556A 31 Spraeder Valve O-Ring BH1537556A 31 Spray Gun Ajustinett BH1537556A 31 Spray Gun Ajustinett	BASE - ANI TRONIC Nozzle, Needle and Aircap Setup			
15 1.4MM *BASE* Nozde, Needle, Aircap Setup BH153756A 16 Spray Gun Body BH153755A 17 Trigger BH1537532A 18 Trigger Mount Stud BT148171-TRN 19 Trigger Mount Stud BT148174-TRN 20 Trigger Stem BT148174-TRN 21 Spray Gun Service / Repair Kit BH0884721-TRN 21 Spray Gun Service / Repair Kit BH0884721-TRN 21 YLLEAR* Spreader Valve O-Ring BE148219-TRN 22 "LEMP* Spreader Valve O-Ring BE148219-TRN 23 "HVLP* Spreader Valve O-Ring BE148219-TRN 24 "HS** Spreader Valve O-Ring BE148219-TRN 25 "HVLP* Spreader Valve O-Ring BE148219-TRN 26 Spreader Valve O-Ring BE148219-TRN 27 Air Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 30 Fan Pattern Adjustment BH1537556A 31 Spray Gun Aju Inlet BA08073-BC1500090A-BS088774-BT1500008A 32 Packing Giand for Air	13	1.2MM *BASE* Nozzle, Needle, Aircap Setup	BH1537551A	
16 Spray Gun Body BH1537554A 17 Trigger BH1537532A 18 Trigger Mount Stud BH16377532A 19 Trigger Mount E Clip BT148174-TRN 20 Trigger Stem BT148175-TRN 21 Spray Gun Service / Repair Kit BH0847211-TRN 21 Spray Gun Service / Repair Kit BH0847211-TRN 22 "CLEAR" Spreader Valve O-Ring BE148216-TRN 23 "WB (WATER-BASED)" Spreader Valve O-Ring BE148216-TRN 24 "HPS" Spreader Valve O-Ring BE148210-TRN 25 "HVLP" Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve O-Ring BE148220-TRN 27 Al Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Krob BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool B1630088A 33 Air Valve Packing Gland, Spring & Seal Kit B408877-BC1500000A-BS088774-BT150008A 34 AD15	14	1.3MM *BASE* Nozzle, Needle, Aircap Setup	BH1537552A	
17 Trigger Mount Stud BH1537532A 18 Trigger Mount Stud BT148171-TRN 19 Trigger Mount E Clip BT148174-TRN 20 Trigger Stem BT148175-TRN 21 Spray Gun Service / Repair Kit BH08847211-TRN 21 Spray Gun Service / Repair Kit BH08847211-TRN 22 **CLEAR* Spreader Valve O-Ring BE148217-TRN 23 **WB (WATER-BASED)* Spreader Valve O-Ring BE148218-TRN 24 **HPS* Spreader Valve O-Ring BE148218-TRN 25 **HVLP* Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve O-Ring BE148220-TRN 27 Air Valve Stem BT148170-TRN 28 Air Valve Stem BT148170-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment AH012739 31 Spray Gun Af Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS150008A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT150008A <th< td=""><td>15</td><td>1.4MM *BASE* Nozzle, Needle, Aircap Setup</td><td>BH1537564A</td></th<>	15	1.4MM *BASE* Nozzle, Needle, Aircap Setup	BH1537564A	
18 Tigger Mount Stud BT148171-TRN 19 Tigger Mount E Clip BT148174-TRN 20 Tigger Stern BT148175-TRN 21 Spray Gun Service / Repair KR BH08847211-TRN 22 "CLEAR" Spreader Valve O-Ring BE148217-TRN 23 "WB (WATER-BASED)" Spreader Valve O-Ring BE148218-TRN 24 "HPS" Spreader Valve O-Ring BE148219-TRN 25 "HVLP" Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve BH1537556A 27 Air Valve Stern BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH153755A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS1500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA089773-BC1500090A-BS088774-BT1500088A 34 AD/15 Silver Spray Cun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BH1538126A 36 Click-To Digital Spray Gun Gauge (BAR - Celsius	16	Spray Gun Body	BH1537554A	
19 Trigger Mount E Cilp	17	Trigger	BH1537532A	
20 Trigger Stem BT148175-TRN 21 Spray Gun Service / Repair Kit BH08847211-TRN 22 "CLEAR" Spreader Valve O-Ring BE148217-TRN 23 "WB (WATER-BASED)" Spreader Valve O-Ring BE148218-TRN 24 "HPS" Spreader Valve O-Ring BE148219-TRN 25 "HVLP" Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve BH1537556A 27 Air Valve Stem BT48170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS150008BA 33 Air Valve Packing Gland, Spring & Seal Kit BA08773-BC1500090A-BS088774-BT150008A 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538126A 37	18	Trigger Mount Stud	BT148171-TRN	
21 Spray Gun Service / Repair Kit BH08847211-TRN 22 "CLEAR" Spreader Valve O-Ring BE148217-TRN 23 "WB (WATER-BASED)" Spreader Valve O-Ring BE148218-TRN 24 "HPS" Spreader Valve O-Ring BE148219-TRN 25 "HVLP" Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve BH1537556A 27 Air Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS150008A 33 Air Valve Packing Gland, Spring & Seal Kit BA089773-BC1500090A-BS08774-BT150008A 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538126A 37 Gravity Cup 600ml (White) BH088697 38 Gravity Cup 600ml (White) BE1500502A 39 Gravity	19	Trigger Mount E Clip	BT148174-TRN	
22 "CLEAR" Spreader Valve O-Ring BE148217-TRN 23 "WB (WATER-BASED)" Spreader Valve O-Ring BE148218-TRN 24 "HPS" Spreader Valve O-Ring BE148219-TRN 25 "HVLP" Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve BH1537556A 27 Ar Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS1500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT1500088A 34 AD/16 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538126A 37 Gravity Cup 600ml (White) BH088897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 600ml (Aluminium) BL138208 40 Gravity Cup 500	20	Trigger Stem	BT148175-TRN	
23 "WB (WATER-BASED)" Spreader Valve O-Ring BE148219-TRN 24 "HPS" Spreader Valve O-Ring BE148219-TRN 25 "HVLP" Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve BH1537556A 27 Air Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS1500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT1500088A 34 AD115 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH088897 38 Gravity Cup 600ml (White) BE1500502A 39 Gravity Cup 600ml (Aluminium) BL138208 40 Gravity Cup 500ml (Aluminium) BL138209	21	Spray Gun Service / Repair Kit	BH08847211-TRN	
24 "HPS" Spreader Valve O-Ring BE148219-TRN 25 "HVLP" Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve BH1537556A 27 Air Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS1500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT1500088A 34 AD115 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538126A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH088897 38 Gravity Cup 600ml (White) BH088897 39 Gravity Cup 600ml (Aluminium) BL138208 40 Gravity Cup 1, Litre (Aluminium) BL138209	22	*CLEAR* Spreader Valve O-Ring	BE148217-TRN	
25 "HVLP" Spreader Valve O-Ring BE148220-TRN 26 Spreader Valve BH1537556A 27 Air Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS1500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT1500088A 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH088897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 600ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	23	*WB (WATER-BASED)* Spreader Valve O-Ring	BE148218-TRN	
26 Spreader Valve BH1537556A 27 Air Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool B51500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT1500088A 34 AD/16 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH638897 38 Gravity Cup 600ml (White) BH608697 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	24	*HPS* Spreader Valve O-Ring	BE148219-TRN	
27 Air Valve Stem BT148170-TRN 28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool B51500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT1500088A 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH638897 37 Gravity Cup 600ml (White) BH68897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	25	*HVLP* Spreader Valve O-Ring	BE148220-TRN	
28 Needle Spring BA089128-TRN 29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS150008BA 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT150008BA 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538126A 37 Gravity Cup 600ml (White) BH08897 38 Gravity Cup 600ml (Mulminium) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	26	Spreader Valve	BH1537556A	
29 Fluid Adjusting Knob BU1537501A 30 Fan Pattern Adjustment BH1537555A 31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS150008BA 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT150008BA 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenhelt) BH1538126A 37 Gravity Cup 600ml (White) BH08897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	27	Air Valve Stem	BT148170-TRN	
Spray Gun Air Inlet	28	Needle Spring	BA089128-TRN	
31 Spray Gun Air Inlet AH012739 32 Packing Gland for Air Valve Key Tool BS1500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT1500088A 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538126A 37 Gravity Cup 600ml (White) BH08897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	29	Fluid Adjusting Knob	BU1537501A	
32 Packing Gland for Air Valve Key Tool B\$1500088A 33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT1500088A 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538126A 37 Gravity Cup 600ml (White) BH08897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	30	Fan Pattern Adjustment	BH1537555A	
33 Air Valve Packing Gland, Spring & Seal Kit BA088773-BC1500090A-BS088774-BT150008A 34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538126A 37 Gravity Cup 600ml (White) BH08897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	31	Spray Gun Air Inlet	AH012739	
34 AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups BU1537504A 35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538126A 37 Gravity Cup 600ml (White) BH08897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	32	Packing Gland for Air Valve Key Tool	BS1500088A	
35 Click-To Digital Spray Gun Gauge (BAR - Celsius) BH1538125A 36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538126A 37 Gravity Cup 600ml (White) BH08897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	33	Air Valve Packing Gland, Spring & Seal Kit	BA088773-BC1500090A-BS088774-BT1500088A	
36 Click-To Digital Spray Gun Gauge (PSI - Fahrenheit) BH1538125A 37 Gravity Cup 600ml (White) BH088897 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	34	AD/15 Silver Spray Gun Adaptor For 3M PPS Series 1, Quartz Cupz & Sagola DPC Cups	BU1537504A	
37 Gravity Cup 600ml (White) BH088697 38 Gravity Cup 600ml (UV) BE1500502A 39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL138209	35	Click-To Digital Spray Gun Gauge (BAR - Celsius)	BH1538125A	
Servity Cup 600ml (UV) BE1500502A BE15	36	Click-To Digital Spray Gun Gauge (PSI - Fahrenheit)	BH1538126A	
39 Gravity Cup 500ml (Aluminium) BL138208 40 Gravity Cup 1 Litre (Aluminium) BL38209	37	Gravity Cup 600ml (White)	BH088697	
40 Gravity Cup 1 Litre (Aluminium) BL138209	38	Gravity Cup 600ml (UV)	BE1500502A	
	39	Gravity Cup 500ml (Aluminium)	BL138208	
41 Spray Gun Spanner BL1500037A	40	Gravity Cup 1 Litre (Aluminium)	BL138209	
	41	Spray Gun Spanner	BL1500037A	



anisprayguns.it

OFFICINE MECCANICHE A.N.I. S.P.A.

Via Arzignano 190 Chiampo - Vicenza Italy T +39 0444 420888 ani@aniit

ani.it



MADE IN ITALY SINCE 1962