

## Adjustment of needle packing cartridge

### MODELS:

**WS-400 evo, LS-400 entech, W-400 series, LPH-300, W-300 WB, W-200 series**

Fig. 1

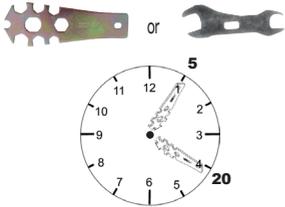


Fig. 2



Fig. 3



1. Make sure that there is no paint residue or dust on the threads and seat surface of gun body.

Clean the gun body if needed.

2. Hand tighten the needle packing cartridge [code 03810620] on the gun body and insert fluid needle from fluid adjustment set.

If it is difficult to insert the fluid needle into the needle packing cartridge, twist the fluid needle during insertion.

3. Tighten the needle packing cartridge 5 - 20 minutes or 15 - 60 degrees by using ANEST IWATA universal spanner or ANEST IWATA needle packing spanner (Fig. 1).

4. Hold the trigger and give a small amount of ANEST IWATA grease [code W2COM6165] to fluid needle as shown in Fig. 2.

5. Pull and release the trigger a couple of times (Fig. 3) and make sure the fluid needle moves back and forth smoothly. If not, the needle packing cartridge is too tight.

Loosen the needle packing cartridge with ANEST IWATA universal spanner or ANEST IWATA needle packing spanner and repeat steps 4 and 5.

